




# Adjust To Fit Sides



**STEP 1:** First align the frame into the door opening.

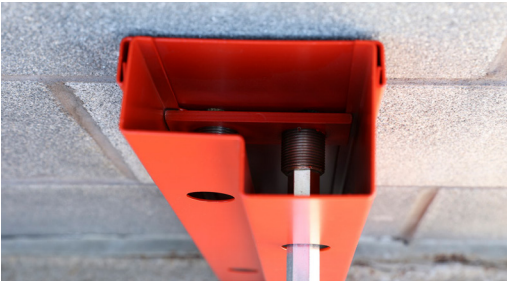

**STEP 2 :** Ensure you have a square and tight frame using the adjuster screws.



**STEP 3:** Once the frame is in position, drill through the frame adjuster screws.



**STEP 4:** Insert the frame fixers.



**STEP 5:** The fully tightened frame fixers are recessed halfway into the frame adjuster screws.