




Adjust To Fit Sides



STEP 1: First align the frame into the door opening.



STEP 2 : Ensure you have a square and tight frame using the adjuster screws.

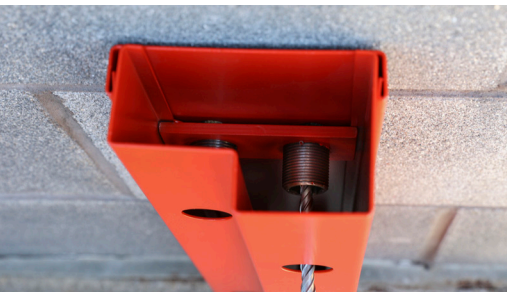

STEP 3: Once the frame is in position, drill through the frame adjuster screws.



STEP 4: Insert the frame fixers.



STEP 5: The fully tightened frame fixers are recessed halfway into the frame adjuster screws.